



1


Die options
ProFIT™
Keystone Jack

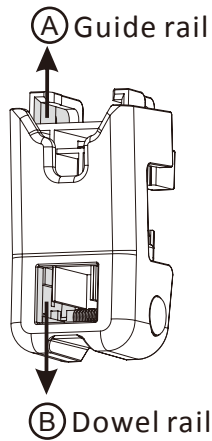


Tool Die

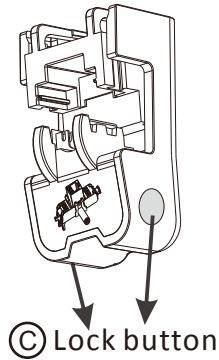


Tool Frame

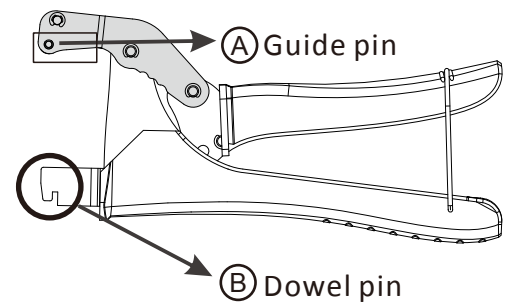


2

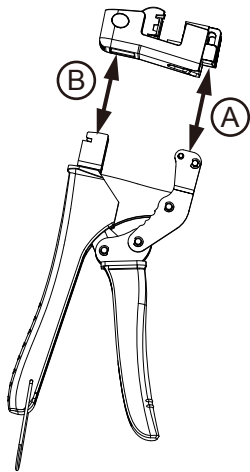

*Insert the Guide rail and Dowel rail into the Guide pin and Dowel pin of Tool Frame.

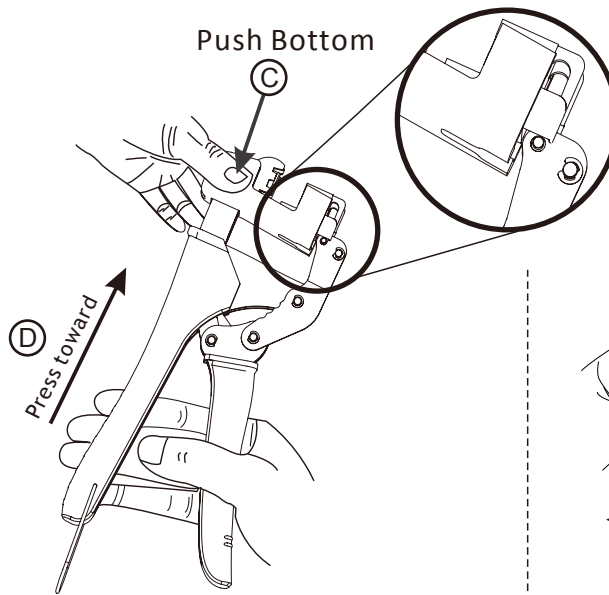


*Press the Lock button at both sides and then move Tool Die down.

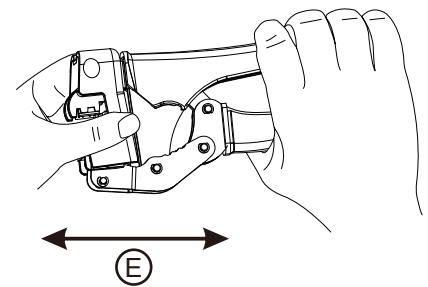


*check if the Tool Die is fixed well.


3

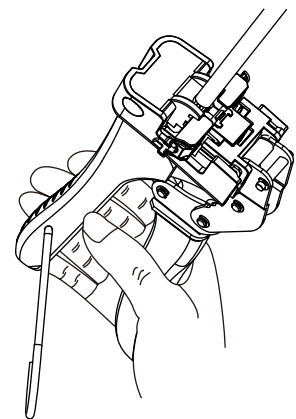

According to 568A or 568B, install wires into the IDC.

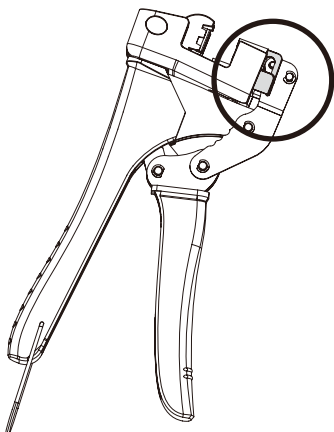

✓ OK

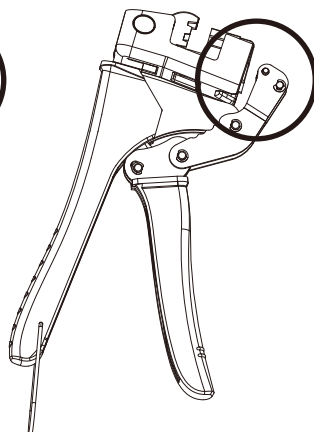

✗ NG