

Product Description

Designed for drop cables, HyperDROP™ MST Terminals, and the HyperDROP™ Squid, the Lifesaver Cable Reel System provides constant tension on your drop cable coils to ensure your cable is within an arm's reach, but out of the way. Adjustable tension keeps excess cable from coming off the reel during deployments. Metal stakes included for working in grass.



P/N: LLR-001



Lifesaver with HyperDROP™ MST Fiber Distribution Terminal with coiled drop cable

Cable remains on the reel until you need it

Adjustable tension/spin rate


Adjustable to fit your drop cable coil size

Built-in handles for easy transport


Instructions



Step 1: Includes (1) base, (1) tray, (4) coil stops, (2) Velcro® straps, (4) ground stakes.

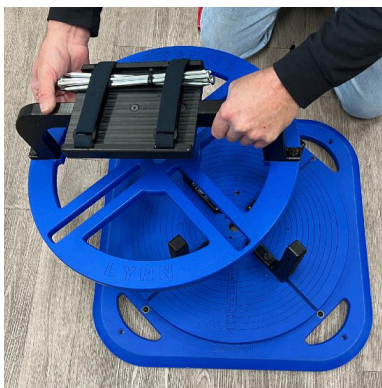


Step 2: Remove tray to access the turntable base.

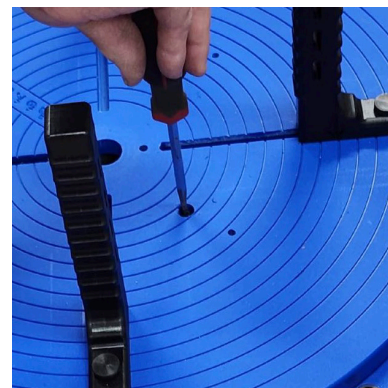


Step 3: Tighten/loosen the large screw to adjust the tension/spin rate.



Step 4: Measure the internal diameter of your coil.

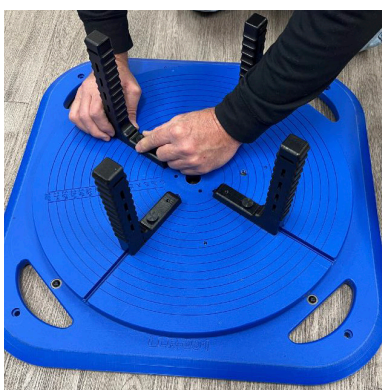

Step 5: Adjust the (4) coil stops to the size of your coil diameter. Loosening the knobs on the coil stops allows you to move the coil stops in and out to the size of your coil. For larger diameter coils, reverse the footing on the coil stops.

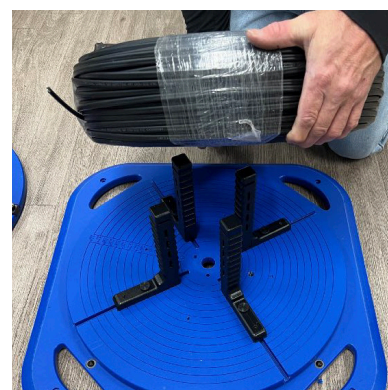

Step 6: Lower cable onto the coil stops.



Step 7: Reattach the tray aligning the tray over the coil stops.



Step 8: Secure the HyperDROP™ MST, HyperDROP™ Squid, or other end of the drop cable to the tray with provided Velcro® straps.



Step 9: If using on grass, install the ground stakes at each corner. Remove the stretch wrap from the coil and you are ready to unwind the coil.